




MCT 360-FG

The Food-Grade option

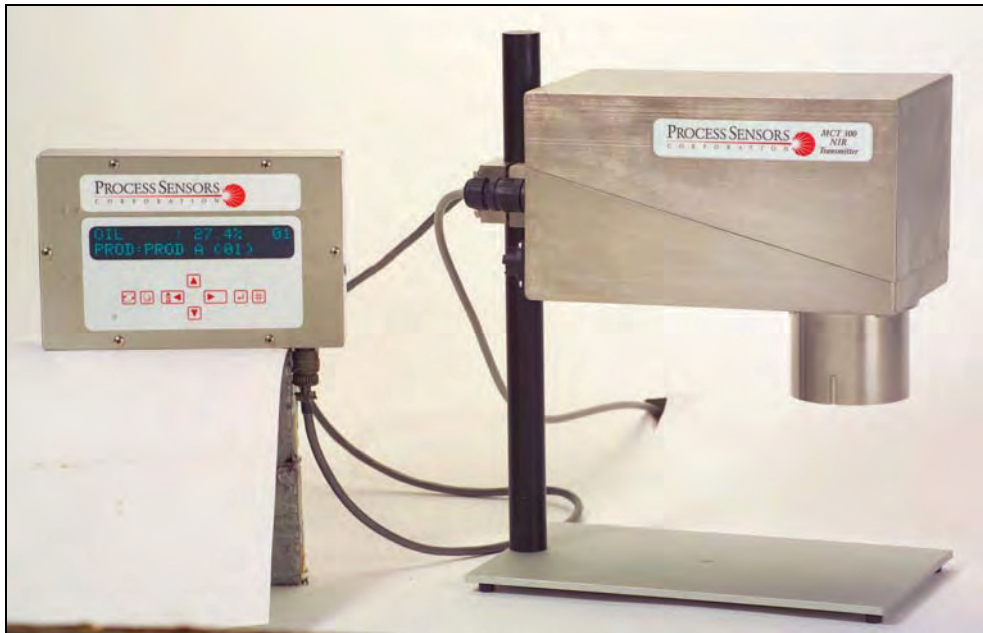

The Food Industry has specific requirements regarding on-line instrumentation to ensure the well-being and safety of the consumer. There can be no glass parts that could potentially shatter and contaminate food and the enclosure should be constructed either of electroless nickel or stainless steel.

Description

The MCT360-FG is available either as an electroless nickel (-en) or a stainless option. The operator interface is only available in electroless nickel. Kel-F is the standard window material, but sapphire is available upon request.

MCT360-FG operates under ambient temperatures of up to 50 °C without air cooling , fitting a cooling panel and vortex air cooler will extend it's operational temperature range to 80 °C.

PSC can provide "dairy-grade" gauges, please contact us for further details.

Unit 4, Adelaide House, Corby Gate Business Park, Corby, Northants NN17 5JG
Tel : +44 (0) 1536 408066 Fax: +44 (0) 1536 407813



UK Distribution by: IMA Ltd, Parkwell House, Otley Road, Guiseley, West Yorkshire, LS20 8BH, England

Phone: +44 (0)1943 878877

Email: info@ima.co.uk

Web: www.ima.co.uk